



**TORQUE WRENCH SETTINGS**

	Nm
Oil pump to extension case	5-7
Attachment plate to gearcase	7-10
Attachment plate to remote housing	7-10
Bottom cover to clutch housing	7-10
Breather baffle	7-10
Clip to clutch release lever	7-10
Cover to gear change housing	7-10
Spool retainer to gear case	7-10
Torsion spring locknut - adjusting screw	7-10
Washer-gearlever retention	7-10
Breather	14-16
Gear lever retainer	14-17
Reverse inhibition shaft	15-18
Reverse light switch	22-26
Adjustment plate to gear change housing	22-28
Extension case to gear case	22-28
Front cover to gear case	22-28
Gear change housing to extension case	22-28
Gear lever housing to remote housing	22-28
Guide clutch release sleeve to bell housing	22-28
Mounting bracket	22-28
Pivot clutch lever to bell housing	22-28
Pivot plate to bell housing	22-28
Plug detent ball and spring	22-28
Plunger housing to gear change housing	22-28
Remote selector housing to extension case	22-28
Slave cylinder to clutch housing	22-28
Thermostat housing	22-28
Upper gearlever assy, to lower gear lever	22-28
Yoke to selector shaft	22-28
Filler plug	25-35
Oil level plug	25-35
Fixing gearlever assembly	47-54
Oil drain plug	47-54
Bell housing to gearbox	65-80
Clutch housing to gearbox	65-80
Output flange bolt	80-100
5th gear layshaft stake nut	204-231